


AquaAmp

INSTALLATION INSTRUCTIONS


HIGH POWER USB-C PD CHARGER

PARTS PROVIDED

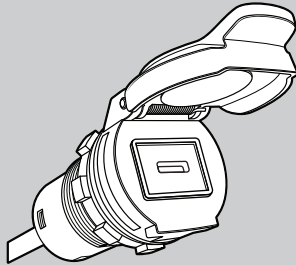


High Power USB-C PD Charger

TOOLS REQUIRED

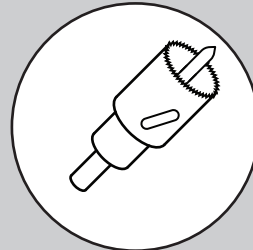


1 1/8" Hole Saw

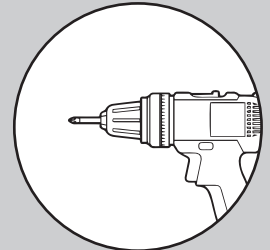


Electric Drill


INSTALLATION GUIDE

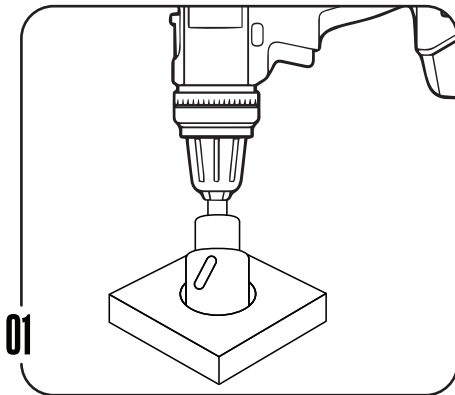


STEP 1: Drill or cut 1 1/8" hole.

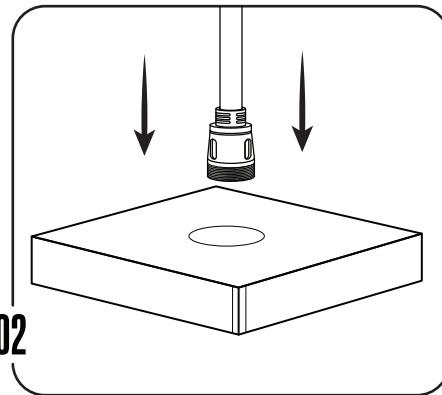


STEP 2: Insert charger into hole.

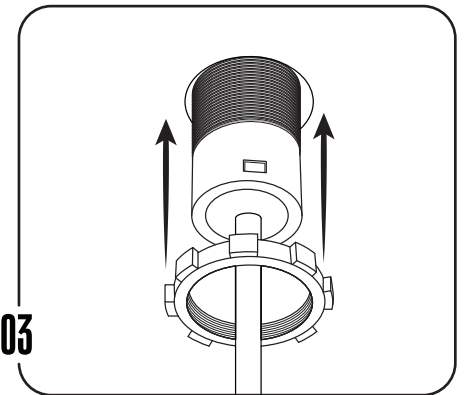

STEP 3: Firmly screw up the locknut.

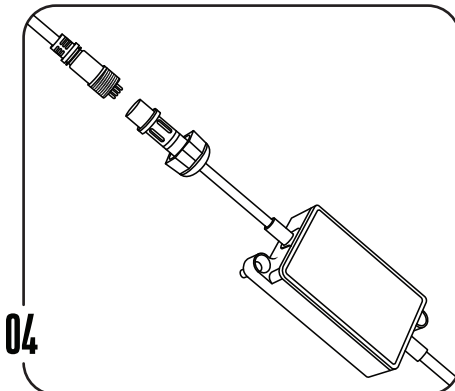

STEP 4: Attach Inline PD controller.

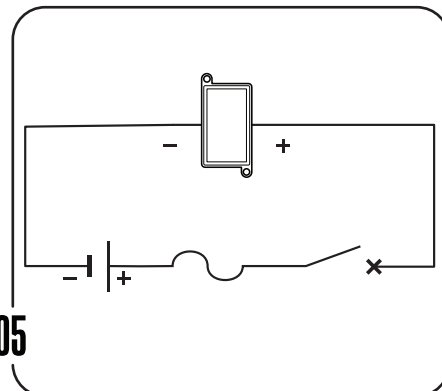

STEP 5: Using an appropriately sized fuse, attach wires to a 12v power supply and ensure there is a waterproof connection.

CONTACT:

orders@aquaamp.com
13926 Monroes Business Park, Tampa, FL 33635

For further information visit www.aquaamp.com